

*Just relax!*  
NORDIC SPA & WELLNESS



# Manual installation spabad/swimspa

SWEBAD®


# Installationsanvisningar




En fas 400v/230v med nolla, jumpers P10-P74, P7-P13




En fas 230v utan nolla, jumpers P10-P74, P7-P13

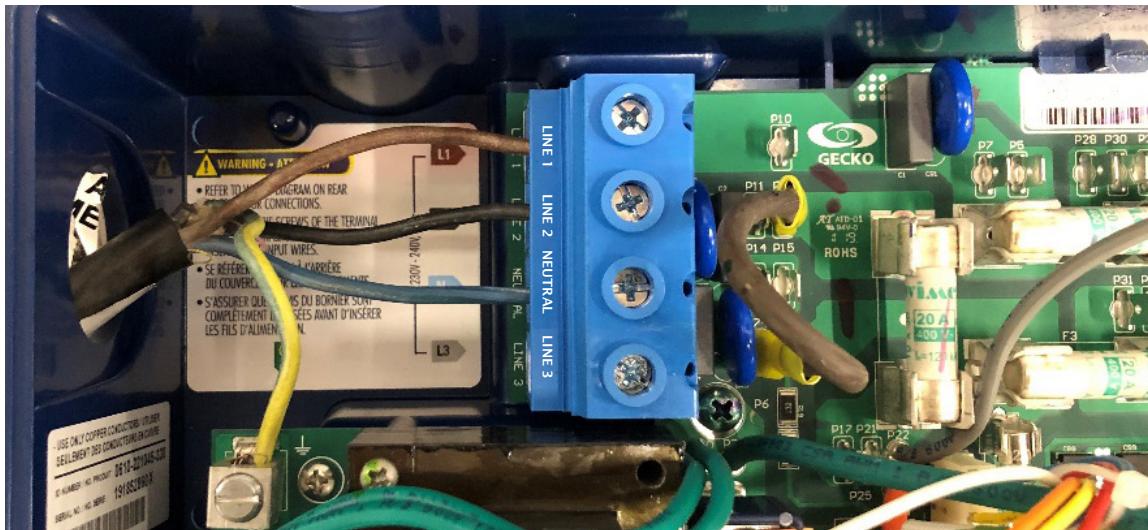


Två faser 400v/230v med nolla, jumpers P13-P74

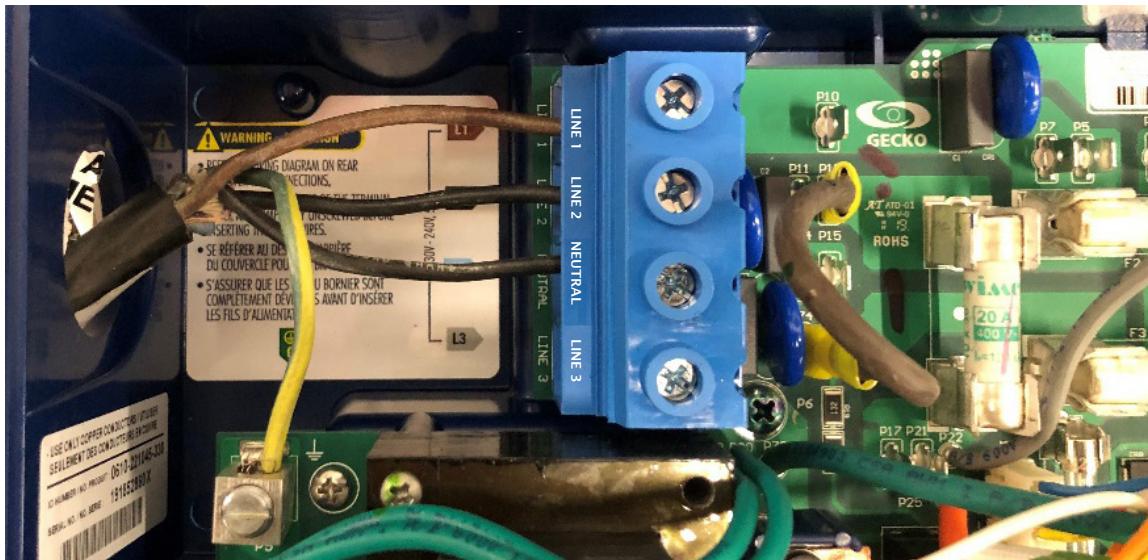

Två faser 230v utan nolla, jumpers P13-P74

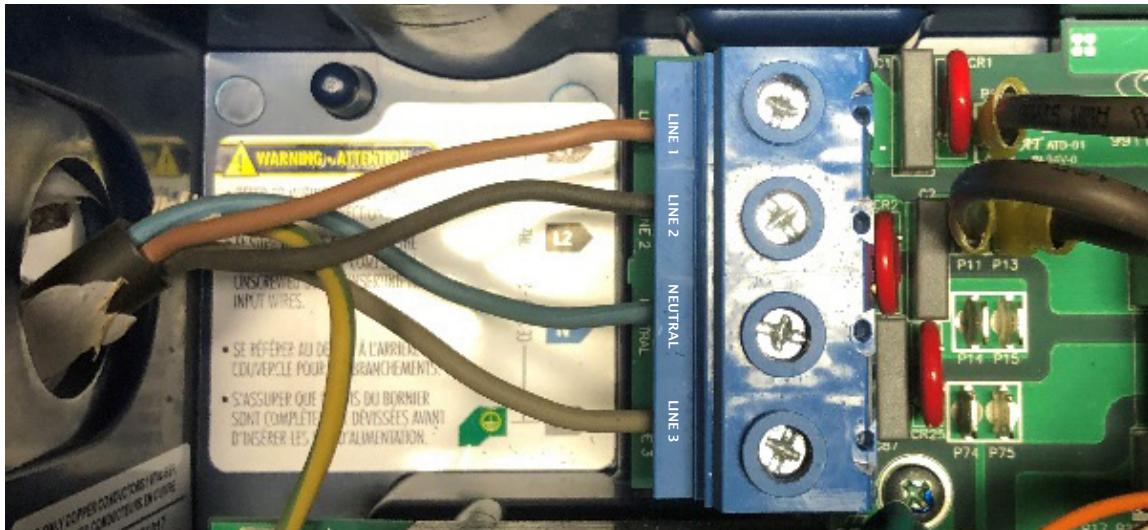

Tre faser 400v/230v med nolla, jumpers P7-P10, P11-P13

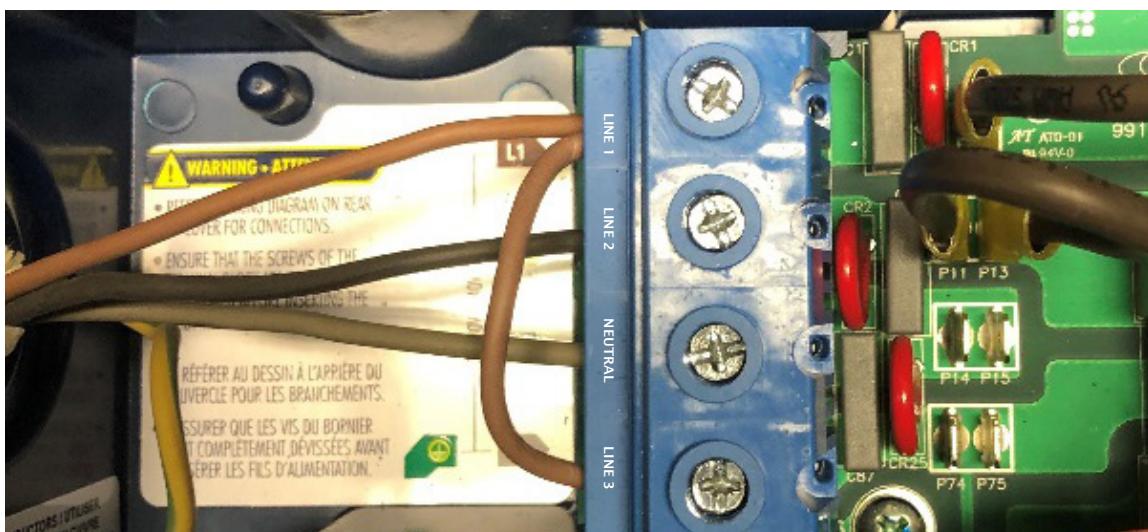

Tre faser 230v utan nolla, jumpers P7-P10, P11-P13

## LINE INPUT CONNECTION

# OF PHASE CONNECTED	LINE INPUT CONNECTION	JUMPERS (BROWN WIRES)	
1	L1 - N - G	P10 - P74	P7 - P13
2	L1 - L2 - N - G	P13 - P74	
3	L1 - L2 - N - L3 - G	P7 - P10	P11 - P13

Bygling/jumper position samt vilken inkopplingsplint som skall användas (3 faser vid leverans)

### 4- Select breaker current

Specify the current rating and the number of phases of the RCD used to ensure safe and efficient current management (and no RCD trippings).



Press and hold the **Program** key for 20 seconds until you access the breaker setting menu.



**Current setting for each phase setting**  
# of phases Current setting range

1	10 to 48 A
2	10 to 20 A
3	10 to 16 A

Choose the number of phases supplying your spa (1-3). Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.



The values displayed by the system correspond to the maximum amperage capacity of the RCD.



Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.

**Note:** If the keypad does not have the **Program** or **Filter** key, use the **Light** key instead.

**For more information, see our website: [www.geckoalliance.com](http://www.geckoalliance.com)**

Ändra antal faser i display (3 faser vid leverans)







# SWEBAD®

**Swebad AB** Fridhemsvägen 3, 602 13 Norrköping, Sverige  
info@swebad.se sales@swebad.se Tel: 010-204 20 10

[swebad.se](http://swebad.se)